



Wireless Door Chime with LED Indicator

Order ref: 350.298UK

User Manual

A stylish portable battery-operated wireless doorbell with visual indication and 38 melodies. Easy to setup and use, the internal chime unit can be wall mounted or free-standing. When activated a green LED flashes on the internal unit making it ideal for noisy environments or the hard of hearing.

Specification:

Battery: receiver	4.5Vdc (2 x AA)
Battery: transmitter	12Vdc (23A)
Frequency	433.92MHz (± 150 kHz)
Transmission distance	100m (open air)
Dimensions	Receiver: 110 x 30 x 75mm; Transmitter: 80 x 20 x 36.5mm
Weight	Receiver: 86g; Transmitter: 24g (without batteries)

Features:

- Modern stylish design with silver bezel and green LED
- Digital coded radio signal to prevent external interference
- Freestanding or wall-mountable
- Wireless range of up to 100m
- Simple wire free installation
- Choice of 38 melodies

Transmitter Installation:

1. Remove the front cover of the transmitter and insert the 12V battery supplied, observing the polarity indicators within the battery compartment.
2. Mount the unit on the doorframe or window frame using the adhesive pad provided. Please ensure the mounting surface is clean and free from grease before installation.

Receiver Installation:

1. Insert 2x AA batteries (not supplied) into the receiver unit observing the polarity indicators within the battery compartment and locate within 100m range of the door press transmitter. Try to ensure there is a clear line of sight between the units if possible and that there are no radio receivers or wireless devices in the direct location of the unit to avoid interference.
2. Press the button on the transmitter to test that both units are connected properly and that there are no issues with signal or interference.
3. Press the music button on the back of the receiver unit repeatedly to select one of the 38 melodies available.
4. Press the volume button on the back of the receiver unit repeatedly to select one of the 4 volume settings available.
5. If the receiver fails to sound when the transmitter is depressed at any time, please replace the batteries.

Warning:

- For reasons of electrical safety, this device must never be immersed in water, exposed to damp conditions or excessive force.
- Do not use this device if you find that it is damaged in any way.
- Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Hereby, AVSL Group Ltd. declares that the radio equipment type: 350.298UK complies with Directive 2014/53/EU. The full text of the EU declaration of conformity for 350.298UK is available at the following internet address: <http://www.avsl.com/assets/exportdoc/3/5/350298UK%20CE.pdf>

Errors and omissions excepted.

Copyright© 2022 AVSL Group Ltd, Unit 2 Bridgewater Park, Taylor Road, Trafford Park, Manchester. M41 7JQ.

AVSL (Europe) Ltd, Unit 3D North Point House, North Point Bus. Park, New Mallow Road, Cork, Ireland.